



Montering af sten beklædning	DK
Mounting of stone cover	GB
Montage von Stein verkleidung	DE
Montering av sten beklädnad	SV
Montering av stein bekleiding	NO
Het monteren van de steen bekleding	NL
Montage du set de pierres	FR
Montaggio del rivestimento in pietra	IT
Montaje del revestimiento de esteatita	ES

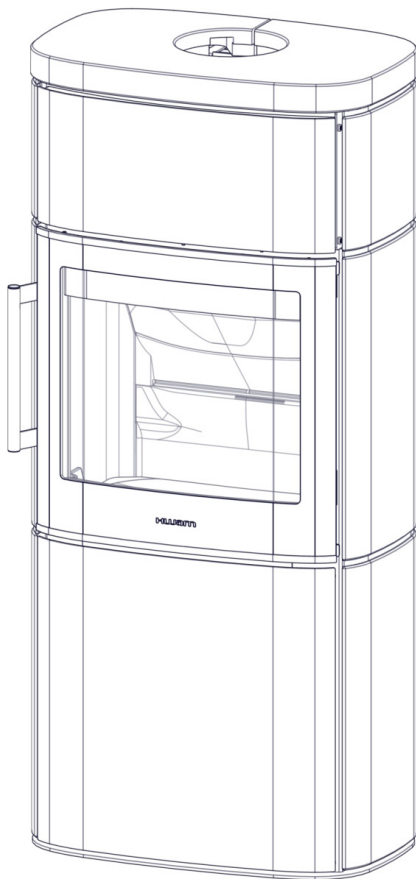


01.05.2015 / 53-1055
www.hwam.com



HWAM 4660

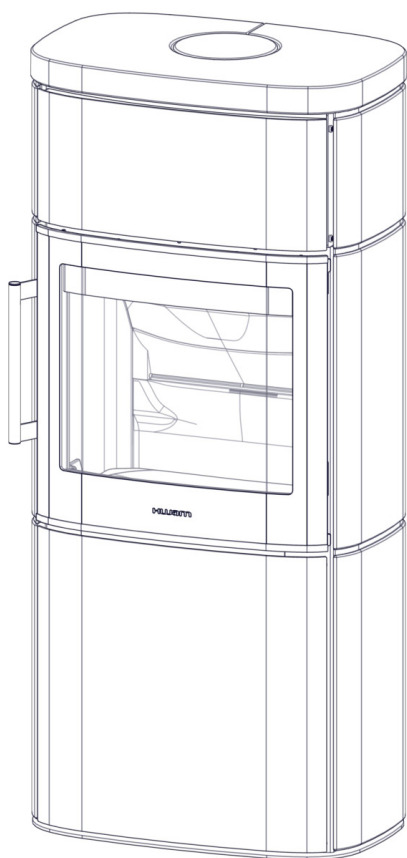


HWAM 4660

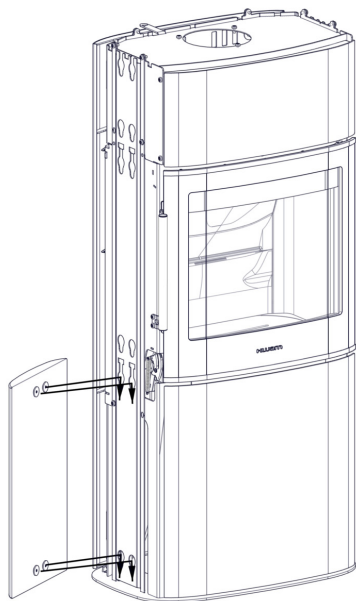



HWAM 4660

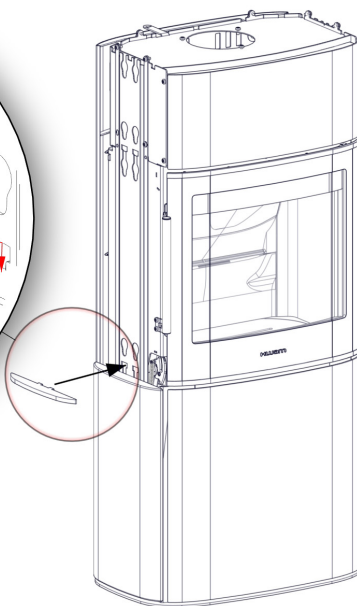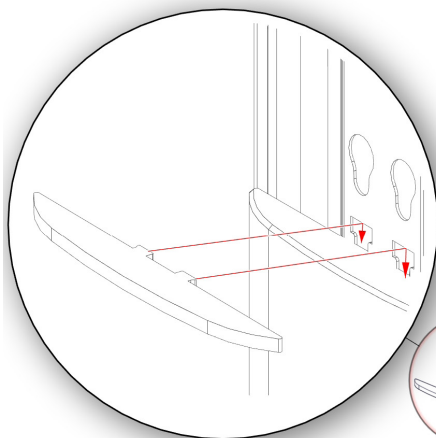


HWAM 4660

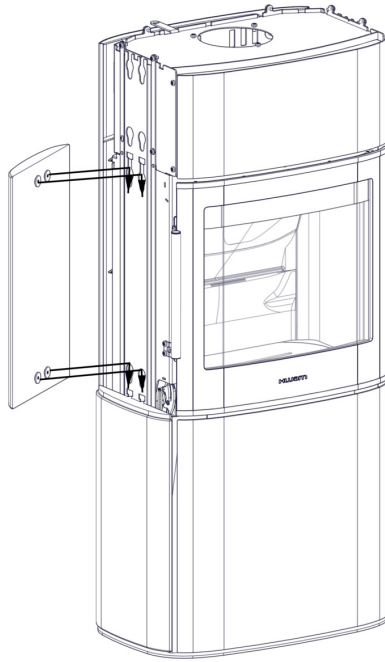


HWAM 4660

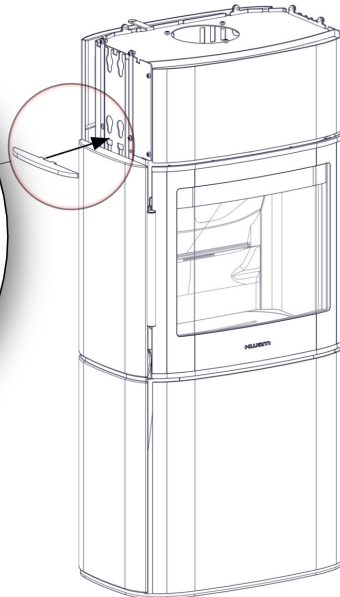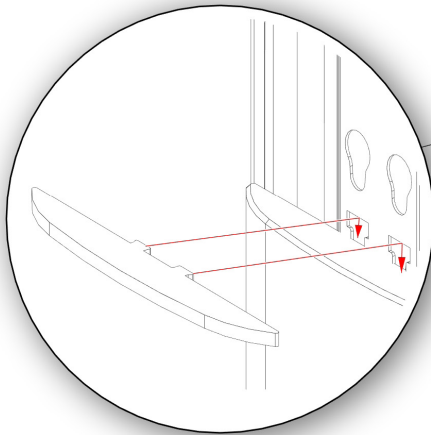


HWAM 4660

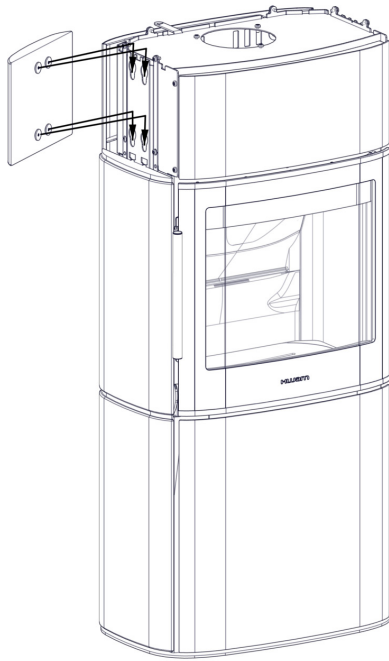


HWAM 4660

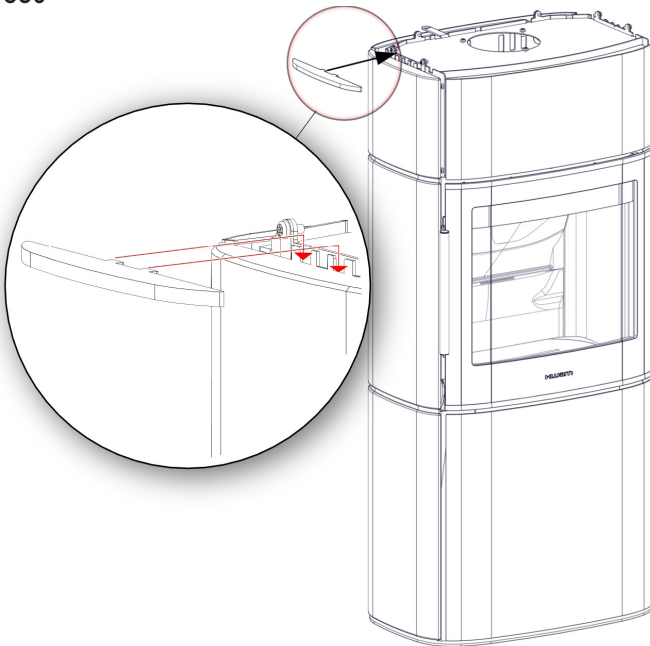


HWAM 4660

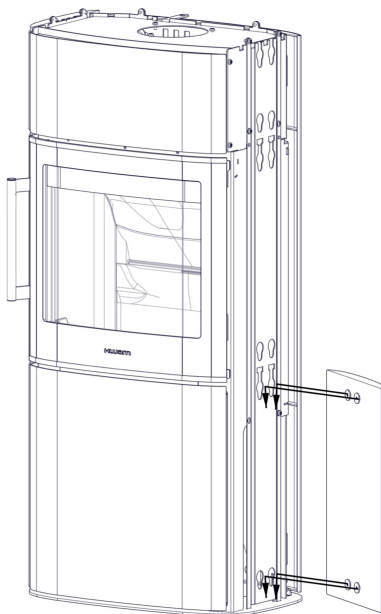


HWAM 4660

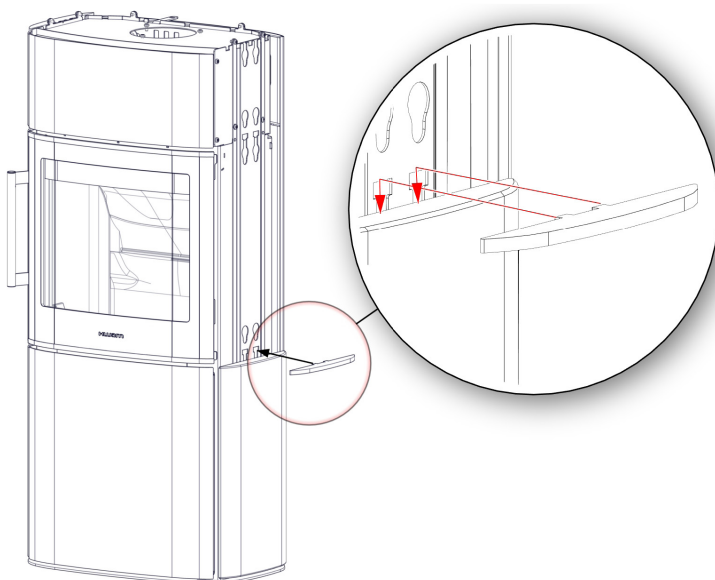


HWAM 4660

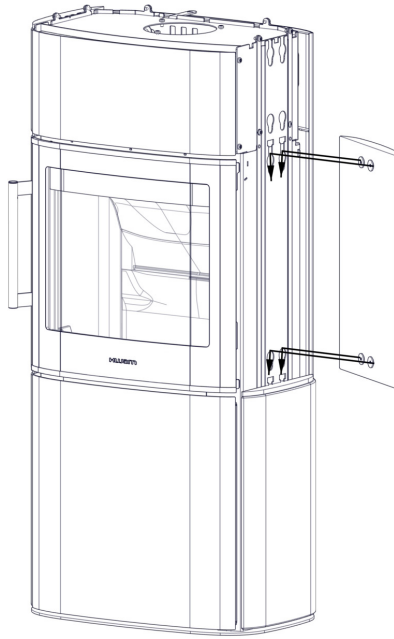


HWAM 4660

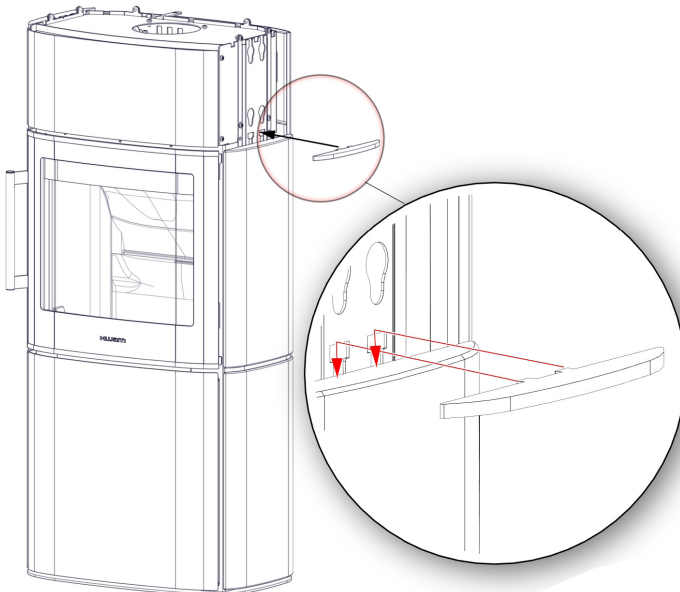


HWAM 4660

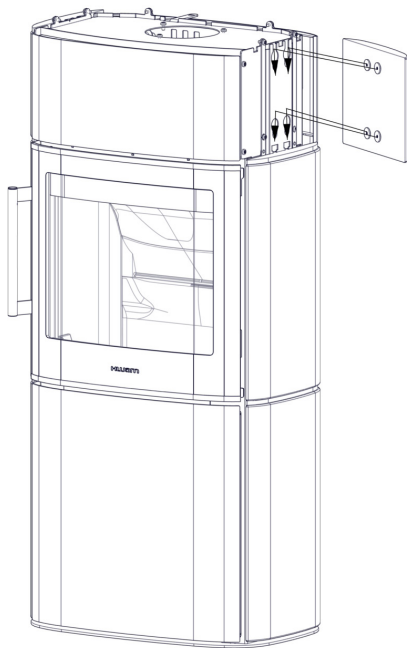


HWAM 4660

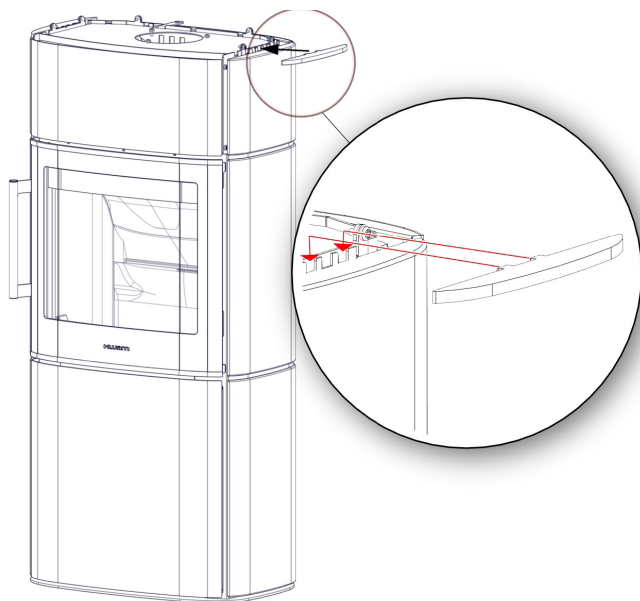


HWAM 4660

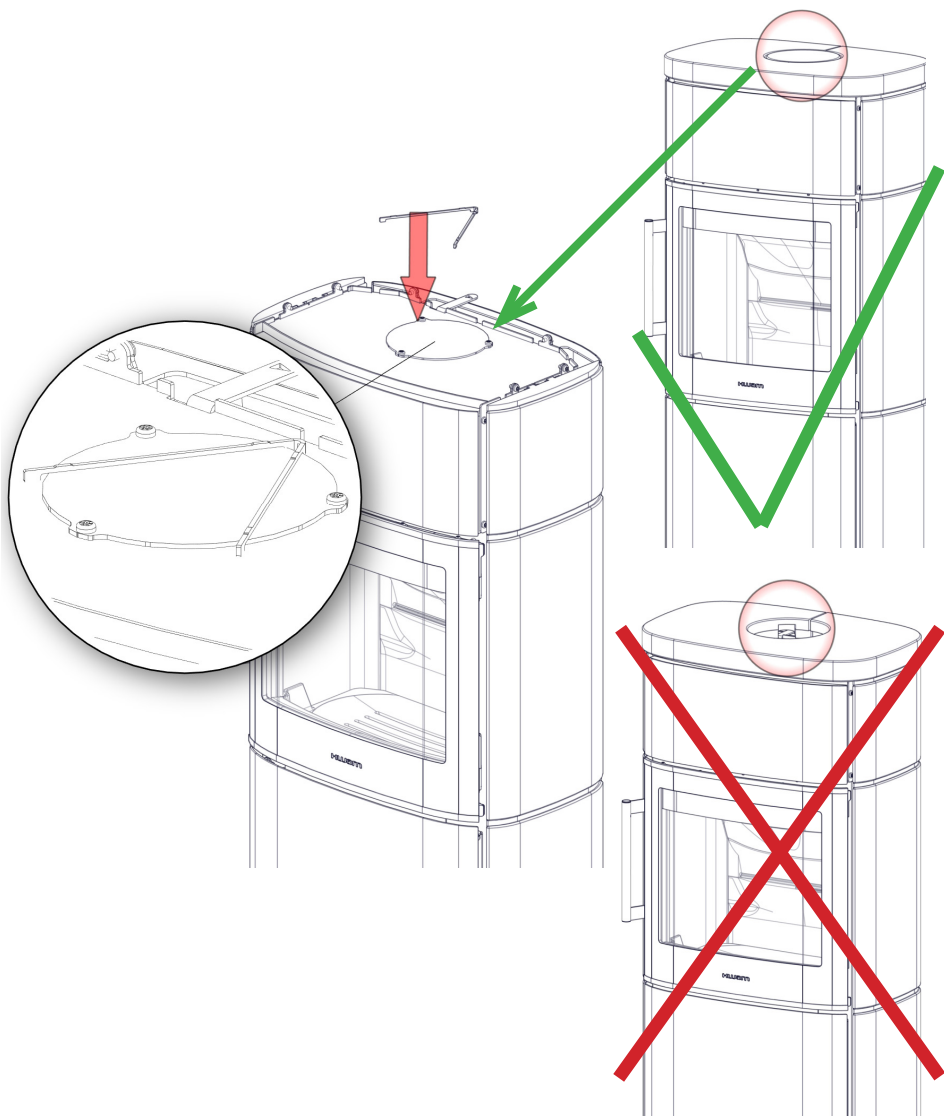

HWAM 4660

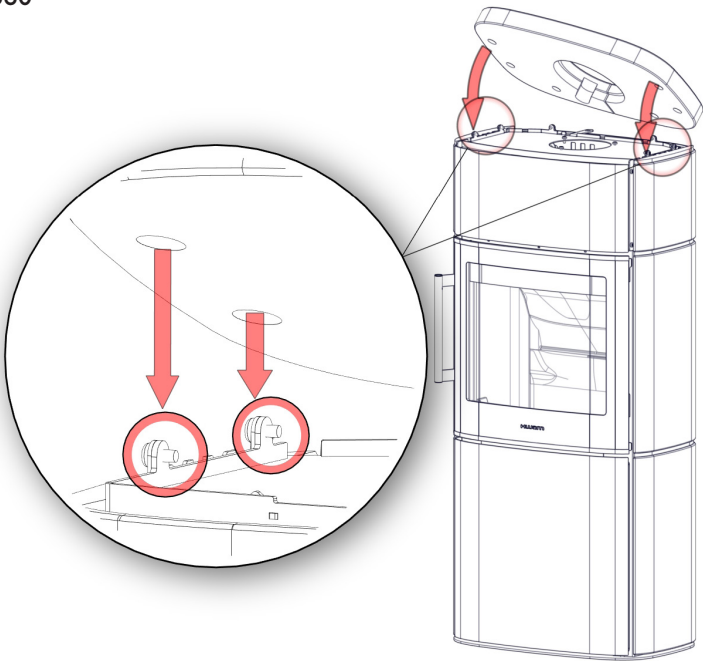


HWAM 4660

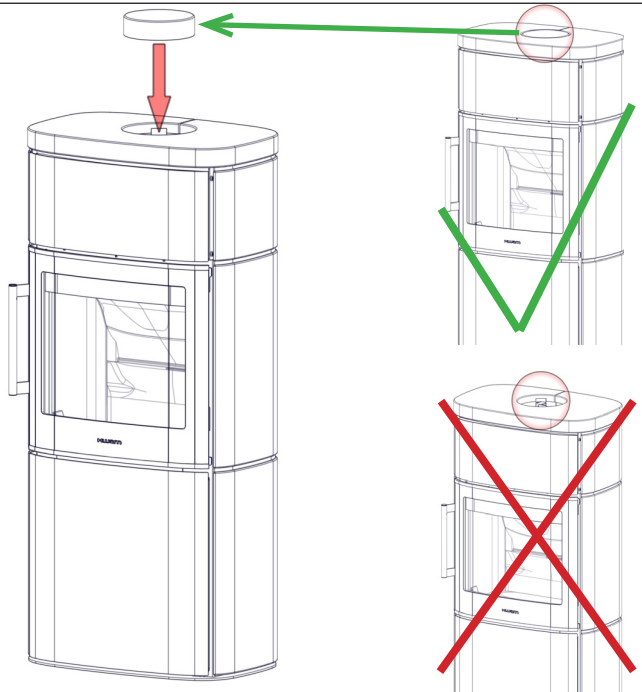


HWAM 4680




HWAM 4680

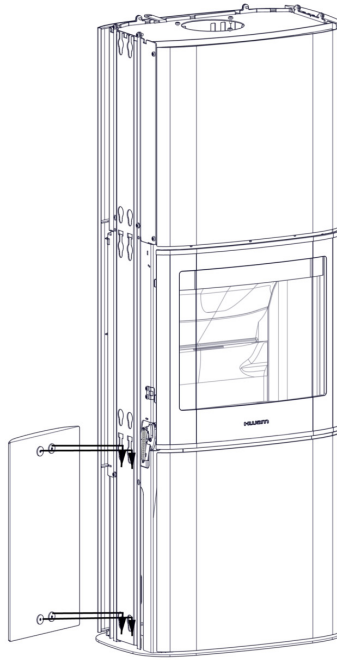


HWAM 4680

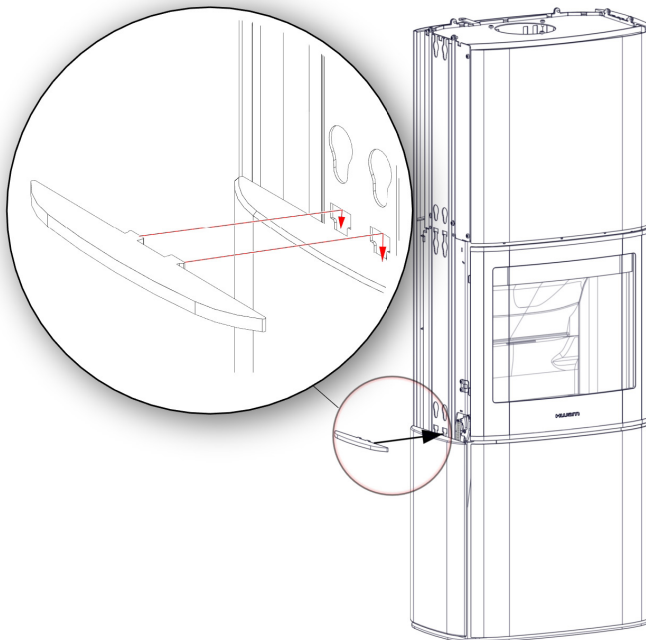


HWAM 4680

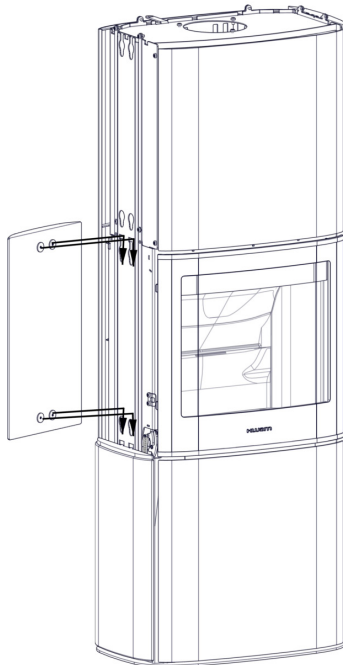


HWAM 4680

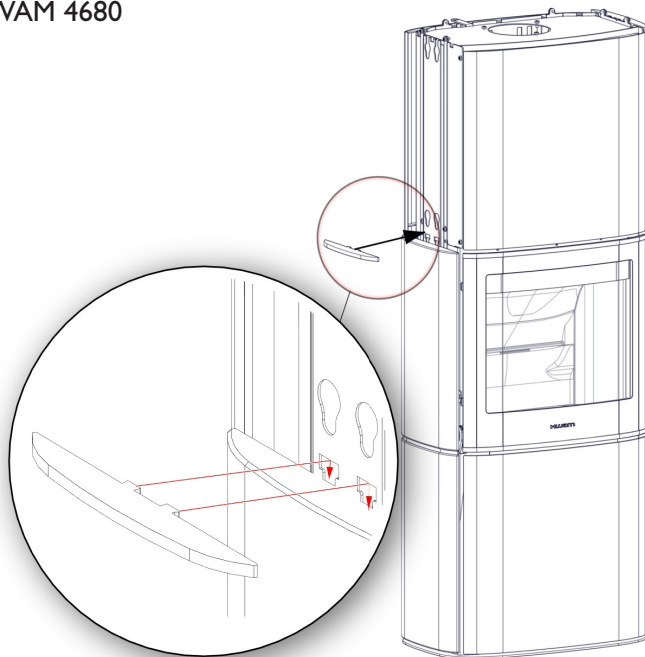


HWAM 4680

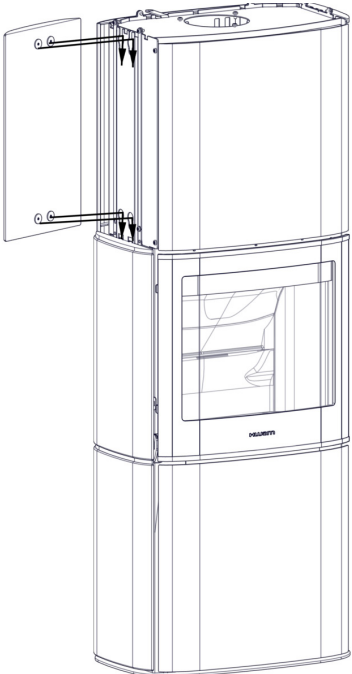


HWAM 4680

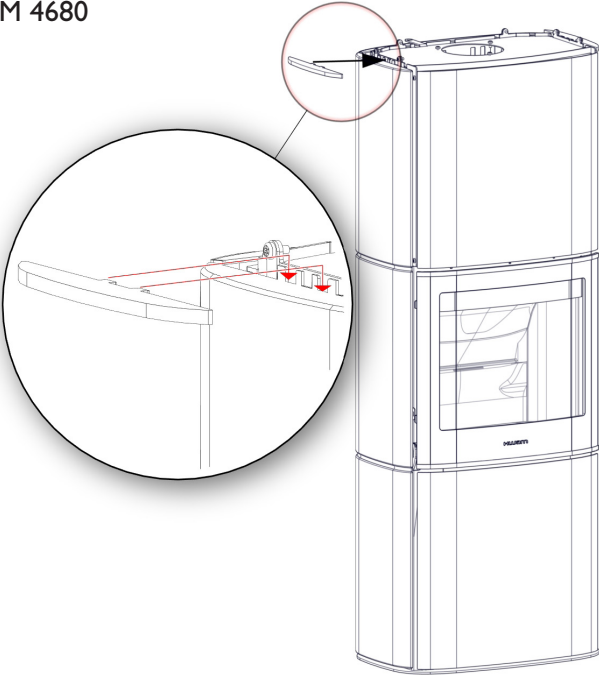


HWAM 4680

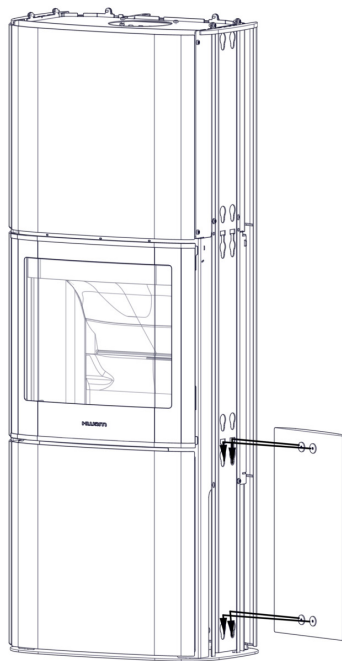


HWAM 4680

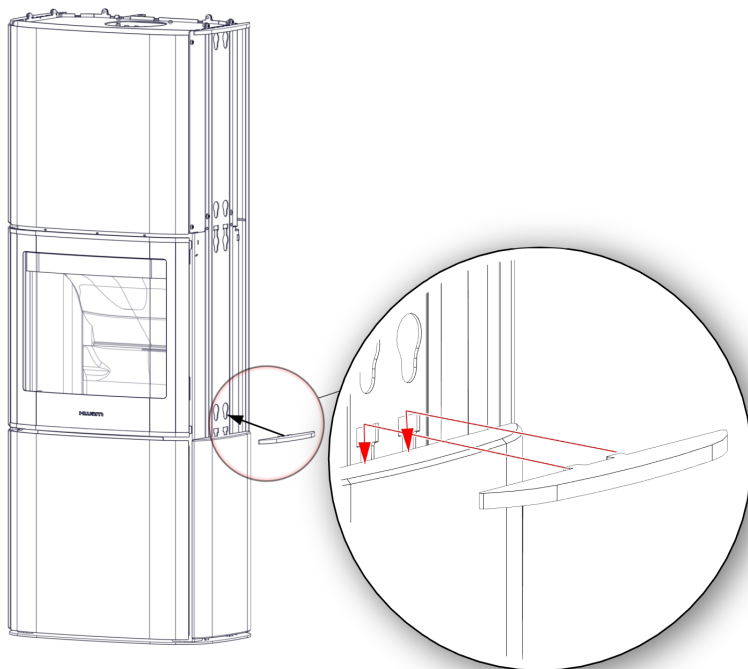


HWAM 4680

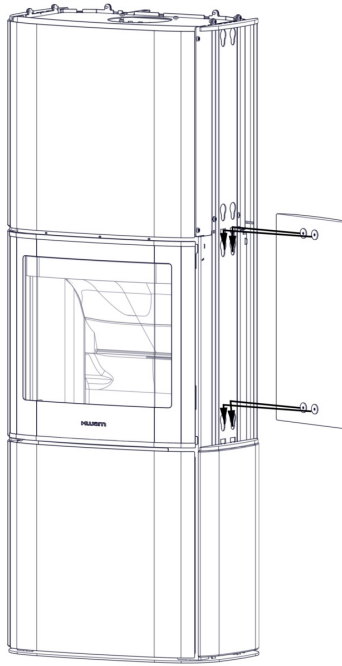


HWAM 4680

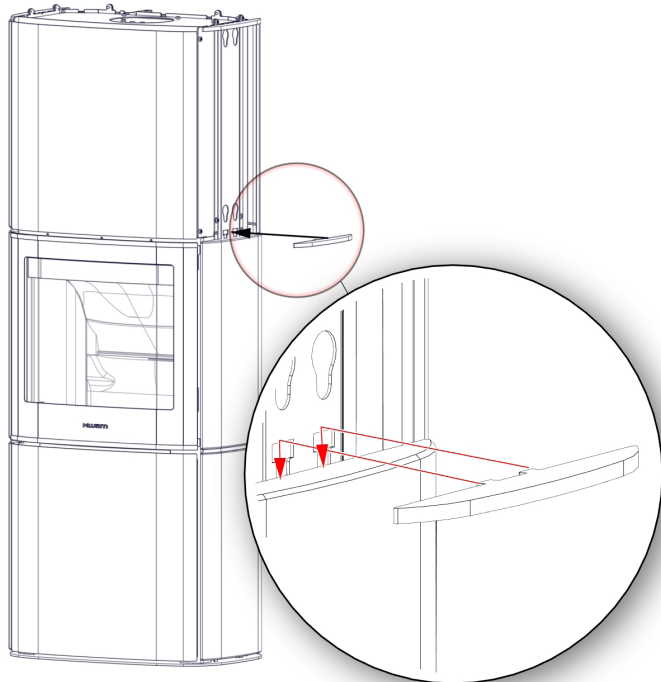


HWAM 4680

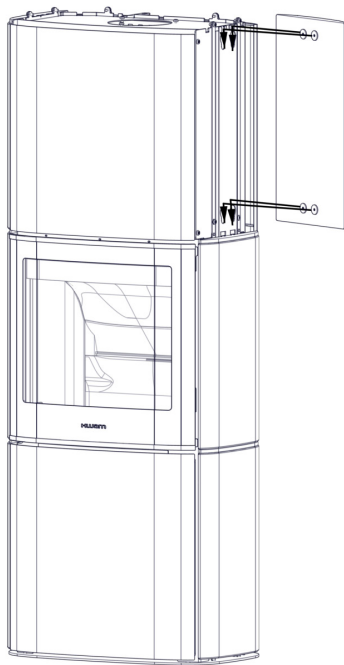


HWAM 4680

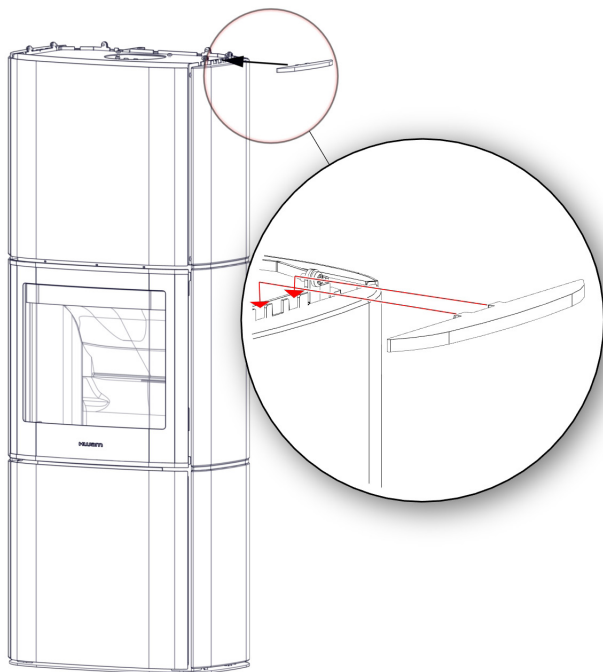

HWAM 4680

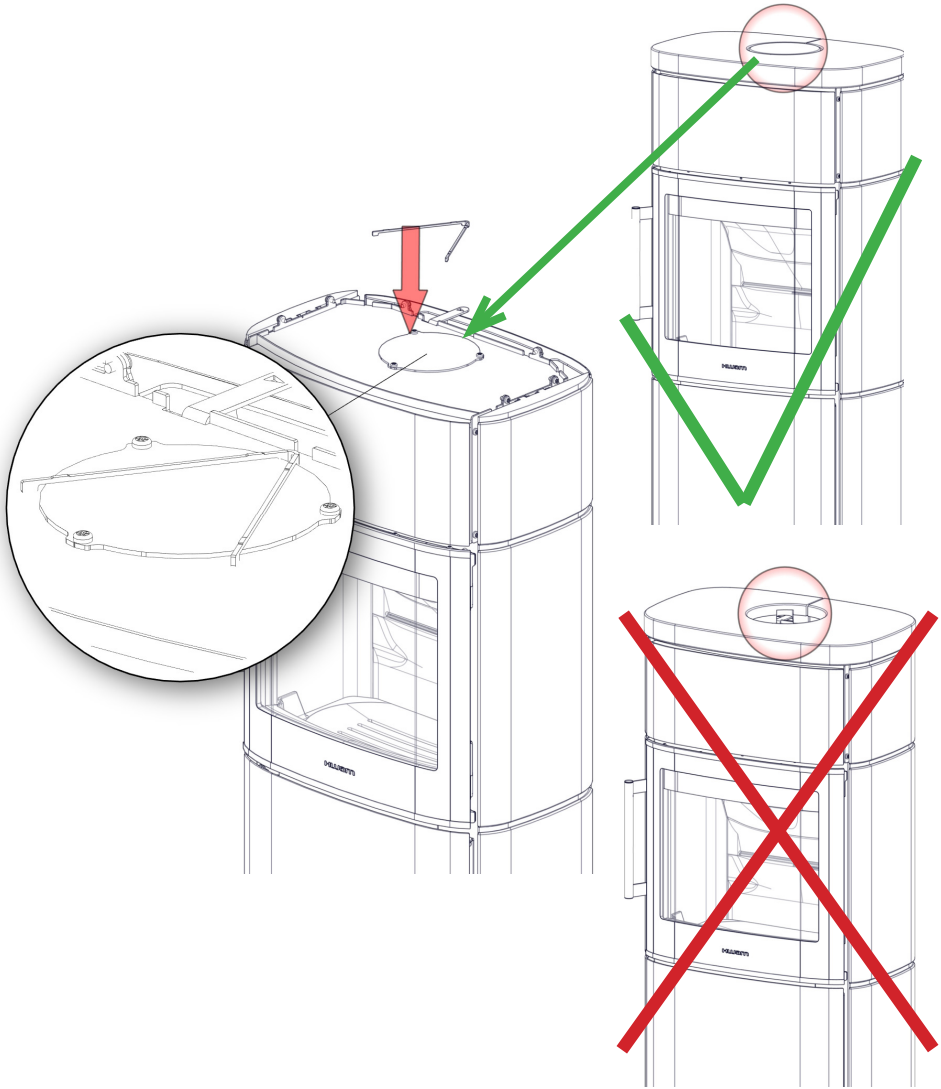

HWAM 4680

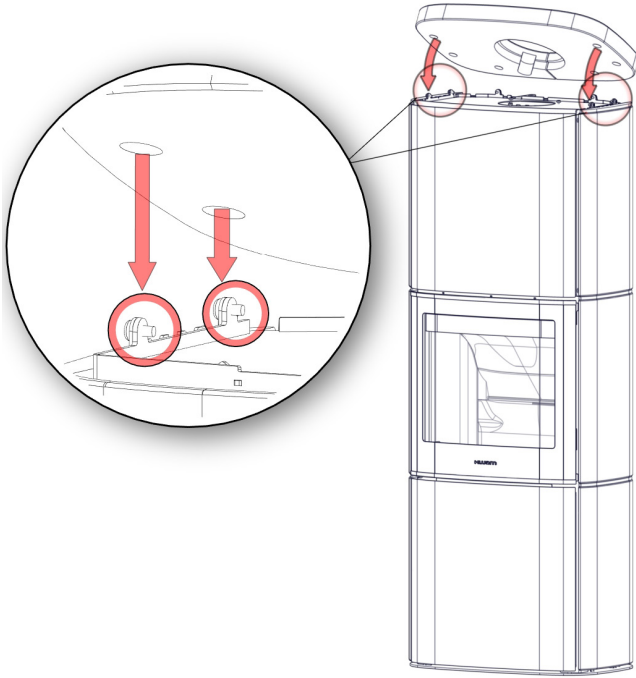

HWAM 4680

